

How to configure a Santop intelligent PDU

Article Overview

Configuring a Santop intelligent PDU involves physical installation, network setup, and web interface configuration to manage power and monitor devices.

Physical Installation

- **Determine Power Requirements:** Verify the voltage and power capacity of your equipment to ensure the PDU can handle the load .
- **Rack Placement:** Choose a suitable location in your server rack or cabinet, ensuring enough space for cabling and airflow .
- **Mounting:** Use the provided mounting brackets and screws to secure the PDU to the rack or cabinet .
- **Connect Power Cables:** Attach the PDU input cable to a power source (wall outlet or UPS) and connect output cables to the devices you wish to power .

Network and Serial Configuration

- **Ethernet Connection:** Connect the PDU to your network using an Ethernet cable. Some models support dual Ethernet ports for daisy-chaining .
- **Serial Connection (Optional):** For initial setup, connect a workstation to the PDU via a serial port using a DB9-to-RJ-45 cable .
- **HyperTerminal Setup:** On your computer, open HyperTerminal or another terminal program, select the correct COM port, set the baud rate to 115200, and flow control to None .
- **Login:** Enter the default credentials (commonly ADMIN / 1001) to access the PDU configuration utility

Article Content

Jul 06, 2026

Intelligent PDU User Guide

Introduction CyberPower's Intelligent Power Distribution Unit (PDU) Web Interface gives users all the features they need to configure,

Apr 10, 2026

19" Intelligent 8-Port PDU User Manu

Intellinet 19" Intelligent 8-Port PDU. Connect one end of a power cord to the input socket and the other to an AC wall outlet. By

Jun 14, 2026

Intelligent PDU User Manual v1.2

Connecting the PDU to a LAN provides communication through an Internet or Intranet connection enabling monitoring and control

May 09, 2026

Intelligent PDU User Manual_ A1.1.0_20240620

In a standard web browser, enter the PDU IP address (" IP ADDRESS") and proceed to configure the PDU as shown in the

Dec 14, 2025

Intelligent PDU User Manual v1.2

To set up RNA mode on two PDUs, the user must (1) configure the PDUs for RNA Mode (using CLI) and then (2) connect the LAN

Dec 26, 2025

Setting up the Intelligent Switched PDU Using the IBM PDU

The IBM PDU Configuration Utility is integrated in the PDU and is used to configure the PDU settings, such as the IP

Jul 05, 2026

Using the IBM PDU Configuration Utility to set up the Intelligent ...

The IBM PDU Configuration Utility is integrated in the PDU and is used to configure the PDU settings, such as the IP

Oct 23, 2025

PANDUIT SMARTZONE G5 USER MANUAL Pdf Download

To configure the network setting, perform the following steps: 1. Serial connect the PDU to a computer's serial port. Set baud rate for

Jul 10, 2026

PDU Manuals & User Guides

Access user manuals, setup guides, and configuration instructions for intelligent Power Distribution Units (PDUs) and rack power

Feb 12, 2026

Eaton G4 Rack PDU Installation and Setup Guide

The Eaton® Enclosure Power Distribution Unit (Rack PDU®) G4 is an intelligent Rack PDU that is designed to distribute power

Nov 17, 2025

Smart PDU Manual A40194_00_IT74_eng

The PDU features the ability to upload and download system configuration files to ease im-plementation across multiple PDU

Apr 18, 2026

G5 PDU User Manual

You can access PDU information such as: System configuration, Network Configuration, User Operation, Device

Aug 14, 2025

Panduit Smartzone G5 Series Intelligent PDU User Manual

Connecting the PDU via Ethernet Port Connecting the PDU to a LAN provides communication through an Internet or Intranet

Jan 06, 2026

SmartZone G5 iPDU Installation Manual

Overview This document provides installation instructions and configuration instructions to qualified personnel for installing a Panduit

Jul 12, 2026

PANDUIT SMARTZONE G5 USER MANUAL Pdf Download

View and Download Panduit Smartzone G5 user manual online. Intelligent PDU. Smartzone G5 power distribution unit pdf manual

Jan 10, 2026

Intelligent PDU User Manual v4.0

The PANDUIT PDU will send alert notifications when a circuit breaker amperage crosses above or below the settings you specify in

Contact Us

For more information, pricing, or custom solutions, please contact us:

Website: <https://www.iiss.co.za>

Email: sales@iiss.co.za

Phone: +27 63 174 2895

Address: Unit 8, Innovation Park, 15 Rivonia Road, Sandton, Johannesburg, 2196, South Africa

This document is for informational purposes only. Specifications subject to change without notice.

